

JACKSON RESEARCH

G/F 80-81 NAM SHAN VILLAGE, SAI KUNG, NT, HONG KONG

Alphabetic Command Summary

Default settings are **bold**.

Basic Command Set

| Command | Function | |
|---------|---|--|
| \$ | Display help for the Basic command set. | |
| An | Attention prefix: informs a sensor identified by “n” that a command is coming. An must proceed all commands. Only the numbers (n) 1-256 maybe be used as sensor identifiers; factory switches are assigned 0 by default and must be assigned a unique identification number before initial network installation. | |
| En | Command mode echo. Enables or disables the display of your typed commands. | |
| | E0 | Command mode echo OFF. Your typing will not appear on the screen |
| | E1 | Command mode echo ON. Your typing will appear on the screen. |
| Fn | Alarm Alert Flag. Enables or disables Alarm Alert Flag. When OFF, only one software alarm state alert will be issued. When ON, a software alarm state alert will be issued once every second until the secure state is restored or until the Flag is set to OFF. | |
| | F0 | Alarm Alert Flag OFF. |
| | F1 | Alarm Alert Flag ON. |
| In | Query the sensor. | |
| | I0 | Display Sensor Alarm Status |
| | I1 | Display Temperature |
| | I2 | Display All Status and Settings |
| | I3 | Displays the product info |
| R | Software Initiated Remote Test | |
| Sn | Set sensor identifier. Only the numbers (n) 1-256 maybe be used as sensor identifiers; factory switches are assigned 0 by default. A new identification number may be assigned at any time. | |
| Z! | Complete hardware reset to factory defaults | |